

SAFETY INSTRUCTIONS

FOR THE ATTENTION OF TRUCK DRIVERS



**Speed limited
to 10 Km/h**

**Access to workshops is
strictly forbidden for
non-authorized
personnel.**

OPENING HOURS

Mond, Tue, Wed, Thu:
Friday :

7h30 / 11h30 - 12h15 / 16h
7h30 / 11h30

- **When you arrive** go to the reception/dispatch door. If there is no one there, go to the office reception area.
- **Entry into** the workshops is strictly forbidden.
- **Access to workshop entry areas** is authorised only following agreement from ROFORGE personnel.
- **Accompanying personnel** must remain in the truck cab.
- **Never let yourself be guided** from the back.
- **Use your flashing hazard lights** when reversing.
- **Switch your engine off** and put on your parking brake.
- **Climb down from your cab facing it** while being aware of the other traffic close by. Do not jump down from your cab, or from the trailer.
- **Strictly forbidden to use:** self-propelled lifting trucks, travelling cranes.
- **Lifting operations** for loading/unloading are to be done by ROFORGE personnel.
- **The driver must not be on the trailer** when loads are being lifted and handled.
- **During loading operations** check the load spread and stability of the goods on board. Check also the total trailer and truck maximum authorised permitted weight (PTRA).
- **Following loading operations** check the chocking and stowing before signing the transport slip.
- **During loading and unloading**, if goods that are not the property of ROFORGE have to be displaced, the ROFORGE company declines any responsibility for the handling operations.
- **Bar and tube deliveries with disposable slings:** check that sling use follows current best practice. At least two slings are necessary to make this type of load stable.